



**stalgast**

ekspert gastronomiczny

## **USER MANUAL**

### **VACUUM JUG**

**MODEL: 383190, 383250, 383351, 383500**



Thank you for your purchase of a Stalgast product. Before use please familiarize yourself in detail with the following instruction manual.

Copying of the following manual without the consent of the manufacturer is prohibited.

Images and drawings are of illustrative character and may differ from the purchased product.

Attention: This manual should be kept in a safe place accessible for personnel. The manufacturer reserves the right to change the technical characteristics of the product without any notice.

## I. SAFETY INSTRUCTIONS

- Incorrect maintenance and/or use may cause serious harm to people and damage the device.
- The device can only be used for the purpose for which it has been designed.
- The manufacturer does not take any responsibility for damages caused by improper maintenance or use of the device.

## 2. STRUCTURE OF THE DEVICE

### 2.1. Intended purpose

This thermos is designed for the purpose of serving beverages.

### 2.2. Description of the device

**383190, 383250**



fig. 1

**383351, 383500**



fig. 2

383190, 383250	383351, 383500
1 – carrying handle	1 – carrying handle
2 – pump with a safety feature	2 – pump with a safety feature
3 – lid opening button	3 – lid opening lever
4 – steel housing	4 – steel housing
5 – base	5 – base

### 3. TECHNICAL SPECIFICATION

<b>Model</b>	383190	383250	383350
<b>Capacity</b>	1.9l	2.5l	3.5l
<b>Height</b>	330 mm	350 mm	350 mm

### 4. OPERATING THE DEVICE

In order to fill the thermos press the button on the top lid (fig. 1 p. 3), in 38335l and 383500 pull the lever (fig. 2 p. 3).

Tilt the lid.

In order to serve beverages place a cup below the thermos dispensing outlet and press the pump (fig. 1,2 p.2)

### 5. CLEANING AND MAINTENANCE

The thermos should be cleaned after each use. Outside and inside of the housing should be cleaned with a soft sponge, water and some dishwashing liquid. Rinse the thermos after washing and wipe it dry. In order to clean the pump fill the thermos with some water and dishwashing liquid and use the pump to empty the thermos. Then repeat this using pure water. After cleaning wipe the thermos dry.

When the device is not used it should be stored with its lid closed

### 6. WARRANTY

The seller provides warranty for the product.

Any damage resulting from settlement of calcium on the device is not covered by the warranty.

Such elements as light bulbs, rubber elements, heating elements damaged by limescale, screws and elements which naturally wear down such as heaters, gaskets, and any other elements damaged mechanically are not covered by the warranty.