



stalgast
ekspert gastronomiczny

Operating Instructions

v1.0 - 09.2010

CITRUS SQUEEZER

MODEL: 480012



Thank you for your purchase of a Stalgast product. Before use please familiarize yourself in detail with the following instruction manual.

Copying of the following manual without the consent of the manufacturer is prohibited.

Images and drawings are of illustrative character and may differ from the purchased product

ATTENTION: This manual should be kept in a safe place accessible for personnel. The manufacturer reserves the right to change the technical characteristics of the product without any notice.

I. SAFETY INSTRUCTIONS

- Incorrect maintenance and/or use may cause serious harm to people and damage the device.
- The device can only be used for the purpose for which it has been designed.
- The manufacturer does not take any responsibility for damages caused by improper maintenance or use of the device.
- When in use, secure the device and its electrical plug from any contact with water or other fluids. In case the device is accidentally dropped into water the electrical plug should be immediately removed from the socket and the device should be inspected by a trained professional.

ATTENTION: Failure to obey these instructions may cause life threatening danger.

- Never open the casing of the device on your own.
- Do not stick any objects into the casing of the device.
- Do not touch the electrical plug attached to the device with wet hands.
- Check the condition of the electrical plug and cord regularly. In case any damage to the plug or cord is discovered order repair by a specialized service provider.
- In case the device is dropped or damaged otherwise, before further use always order a check-up and repair by a specialized service provider.
- Do not make any attempts to repair the device on your own – this may cause life threatening danger.
- Protect the electrical cord from contact with sharp or hot objects and keep it away from open fire. When you disconnect the device from the electrical socket always hold the plug and never pull the electrical cord.
- Secure the electrical cord (or the extension cord), so that it is not unplugged by mistake and so that no one can stumble over it.
- Monitor functioning of the device while in use.
- Use of the device by people underage, physically or mentally incapable, with motion disorders as well as people without proper experience and knowledge regarding the use of this device should not be allowed. All of the above should only use the device under supervision of a person responsible for their health and safety.
- When not used or during maintenance you should always unplug the device from the source of electricity by removing the electrical plug from the socket.


ATTENTION: when the electrical plug is plugged into the socket the device is constantly live.

- Switch the device off before removing the plug from the socket.
- Never pull the device by the electrical cord.

2. TECHNICAL SPECIFICATION

Voltage	230 V / 50 Hz
Power	180 W
Dimensions Øxh	315x440 mm

3. STRUCTURE OF THE DEVICE

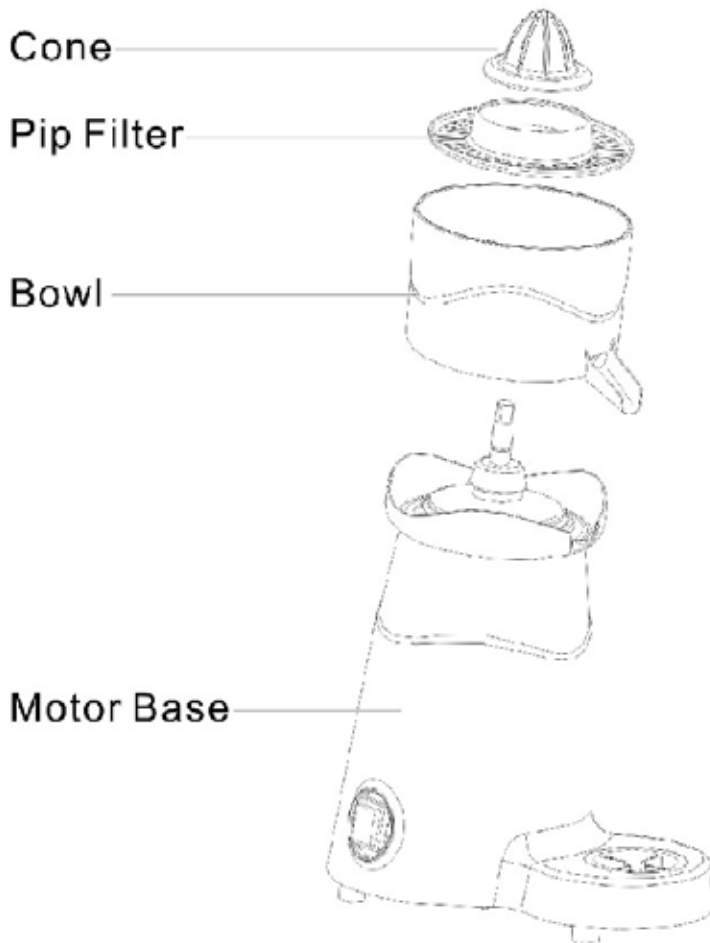

4. BEFORE USE

1. Read all instructions.
2. Check the voltage of your juicer before plugging it in
3. Before plugging in, ensure switch is off.

CAUTION

1. Never immerse the motor base in water, clean it with a damp cloth.
2. Unplug from the power supply when not in use, before putting on or tarts, and before cleaning.
3. Close supervision is necessary when any appliance is used by or near children.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
5. Do not let cord hang over edge of table or worktop, or touch hot surface.
6. Don't use the appliance if the rotating sieve is damaged.
7. Switch off the appliance before changing accessories or approaching parts which move in use.

5. HOW TO OPERATE

1. Position the cone.
2. Cut the fruit to be squeezed into two halves.

3. Switch on the appliance by putting the on/off switch to "1".
4. Squeeze the fruit halves.
5. Switch off the appliance by putting the on/off switch to "0".

6. CLEANING

1. Always switch off the motor and unplug the juicer.
2. Never immerse the motor base in water, wipe with a damp cloth to clean it.
3. The appliance is very easy to clean by quick removal of all parts in contact with the juice: cone pip filter bowl etc. Easy to clean removable drip tray.
4. Rinse all parts coming into contact with the juice immediately after use immediately after use.
5. Take care to wash all parts in contact with the juice before using the appliance for the first time.

7. END-OF-SERVICE LIFE RECYCLING

After the device reached its end-of-service life or when buying new equipment at Stalgast you can return the old device. Send it to us and a specialized company will recycle it in accordance with the ESOL for Electrical and Electronic Equipment Act (Legal Journal 2005 no. 180 point 1495).

8. WARRANTY

The seller provides a warranty for the product.

Any damage resulting from settlement of calcium on the device is not covered by the warranty. The warranty also does not cover: damages caused by external factors such as atmospheric discharge, change in the electrical current voltage, improper voltage setup, supplying electricity from an improper source, mechanical damage, thermal damage, chemical damage of the device and faults caused by any of the above.

Such elements as light bulbs, rubber elements, heating elements damaged by limescale, screws and elements which naturally wear down such as heaters, gaskets, and any other elements damaged mechanically are not covered by the warranty.

